


# Using the LCD5501Z Keypad

**WARNING:** Please refer to the System Instruction Manual for information on limitations regarding product use and function and information on the limitations as to liability of the manufacturer.

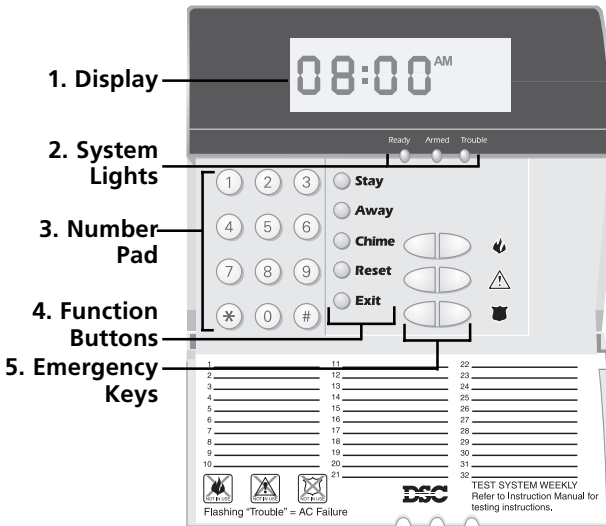


The LCD5501Z keypad shows the status of your security system using an LCD-style display, along with fixed words and numbers.

This instruction sheet describes the basic features of the keypad. For more detailed information on your security system and how to use it, please read your system's *Instruction Manual*.

**Important Note:** Test system weekly and have any system trouble conditions corrected by your alarm installer.

## 1. Display

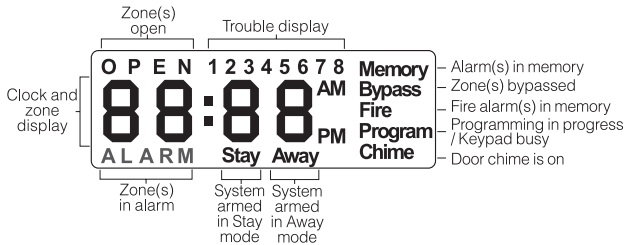

## 2. System Lights:

### Ready Light

If the Ready light is ON, the system is ready for arming. The system cannot be armed unless the Ready light is ON.

### Armed Light

If the Armed light is ON, the system has been armed successfully.

### Trouble Light

If the Trouble light is ON, press **(\*) (2)** to view the troubles. The keypad will indicate the troubles using numbers 1-8 at the top of the keypad display. See "Identifying Trouble Conditions" in your system's *Instruction Manual*.

## 3. Number Pad:

Use the number pad to enter your code, and to access system functions. To exit a function and return to the Ready state, press **(#)**. To select a function press **(\*)**.

## 5. Function Buttons:

If your installer has enabled them, you can use the function buttons to access the stay arm, away arm, door chime, sensor reset and quick exit features. (Your installer may program other functions for these buttons.) Press and hold the appropriate button for two seconds. Refer to your *Instruction Manual* for more information on these features.

## 4. Emergency Keys:

Press both **(\*) \*** keys for two seconds to send a FIRE message. Press both **(Δ) \*** Keys for two seconds to send an AUXILIARY message. Press both **(■) \*** Keys for two seconds to send a PANIC message.

**\* IMPORTANT NOTE (All Keypads):** The Fire, Auxiliary and Panic keys will NOT function unless programmed by the installer. If these keys are in service and the installer has enabled audible feedback, holding down the key for two seconds will cause the keypad sounder to beep indicating that the input has been accepted and sent.

## Using the LCD5501Z Keypad

The LCD5501Z works similarly to the other keypads described in your system's *Instruction Manual*. For more information on individual functions, see your system's *Instruction Manual*.

### Viewing Open Zones

Before you can arm your system, all the zones must be closed. If some zones are currently open, the keypad will display "Open", and the Ready

light will be off. To see the numbers of the open zones, press **#**. Before you try to arm your system, go to the open zones and close all doors and windows, and make sure no one is present in zones with motion detectors.

### Viewing Zones in Alarm

If there is an alarm on your system the keypad will display "Alarm" and will scroll the numbers of the zones affected.

---

## System Functions - Quick Reference

The following chart lists the basic functions of your system and the keys to press for each function.

**NOTE: Some functions may not be available on your system. Ask your installer for more information.**

### To do this:

Arm system (Away): .....

Arm system (Quick): .....

Arm system (Stay): .....

Arm system (No Entry Delay): .....

Bypass zones: .....

Disarm system: .....

Exit premises when system armed: .....

Reset smoke detectors: .....

Program access codes .....

Send Fire message: .....

Send Auxiliary message: .....

Send Panic message: .....

Set system time and date: .....

Silence fire alarm: .....

Silence intrusion alarm: .....

Turn auto-arm on/off: .....

Turn door chime on/off: .....

Turn on bypassed zones (if Stay armed): .....

View alarm memory: .....

View troubles: .....

### Press this:

[access code], leave through entry/exit door  
OR press **Away** (if enabled)

**\* 0** (from Ready state)

[access code], do not exit premises  
OR press **Stay** (if enabled)

**\* 9** [access code]


**\* 1** [two-digit zone number(s)], **#** to exit


[access code]


**\* 0** OR press **Exit** (if enabled)

**\* 7 2** OR press **Reset** (if enabled)

refer to "Programming Access Codes" in *Instruction Manual*

 (press and hold for two seconds, if enabled)

 (press and hold for two seconds, if enabled)

 (press and hold for two seconds, if enabled)

**\* 6** [master code] **1**, enter current time (24hr format: 00:00-23:59) and date (month/day/year) as 10 digits: [hh:mm MMDDYY]

**#**

[access code]

**\* 6** [master code] **2**

**\* 4** to toggle on or off OR press **Chime** (if enabled)

**\* 1**

**\* 3**

**\* 2** (Troubles indicated by numbers 1-8 on top of keypad display. See "Viewing Trouble Conditions" in *Instruction Manual* for list of trouble definitions)