



Model 5207 Fire Alarm Built-in Touchpad Operating Instructions

These instructions must be framed and displayed next to the Model 5207 panel in accordance with NFPA 72 fire code for Local Protected Fire Alarm Systems.

Basic Operation of Built-in Touchpad

Function	Keystrokes
System test*	[0] [ENTER]
Reset alarms (or smoke detectors)*	[1] [ENTER]
Clear alarm memory*	[2] [ENTER]
Reset dialer	[3] [ENTER] + code 0 or 1
Start download	[4] [ENTER] + code 0 or 1
Alarm memory display	[5] [ENTER]
Display troubles	[6] [ENTER]
Silence troubles or alarms*	[7] [ENTER] + code, or [SILENCE] + code
Disable/Enable zones	Zone # + [DISABLE]
Begin fire drill	[2] [0] [ENTER] + code 0 or 1
<i>The system sounds an alarm and reports a fire test when you exit fire drill mode.</i>	
End fire drill	[SILENCE] + code 0 or 1
Walk test	[2] [2] [ENTER] + code
Zone Troubleshooting mode	[2] [5] [ENTER] + code
Step Programming mode	[2] [7] [ENTER] + code 0

Function	Keystrokes
Set date* For example, to set the date of Jan. 13, 1995, enter:	[8] [ENTER] + 6-digit date Use <i>mmddy</i> format for date, where: <i>mm</i> = Month (enter leading 0 for 1-digit months) <i>dd</i> = Day (enter leading 0 for 1-digit days) <i>yy</i> = Year [0] [1] [1] [3] [9] [5]
Set time* For example, to set the time of Wed., 4:30 p.m., enter:	[9] [ENTER] + 6-digit date Use <i>wdhhmm</i> format for time, where: <i>w</i> = Day of week (0=Sun., 1=Mon., 2=Tue., 3=Wed., 4=Thu., 5=Fri., 6=Sat.) <i>d</i> = Time of day (0=AM, 1=PM) <i>hh</i> = Hour (enter leading 0 for 1-digit hrs.) <i>mm</i> = Minutes (enter leading 0 for 1-digit min.) [3] [1] [0] [4] [3] [0]
To exit download, set date, and set time modes, press [CLEAR] [CLEAR].	

* These functions do not require you to enter a valid operating code unless the **NEED CODE AT PANEL** option is selected during programming.

For service call: